


Box: PLOCK 1

BIKE	BMW R1200 GS	PART NO.	EBM-56
YEAR	2004-09	FIT KITS	Z039.11188
NOTES	Use standard fittings where not supplied. <b>Remove standard gasket if fitted.</b>	DB-Killer	SCEXDBK12 - (Type B)

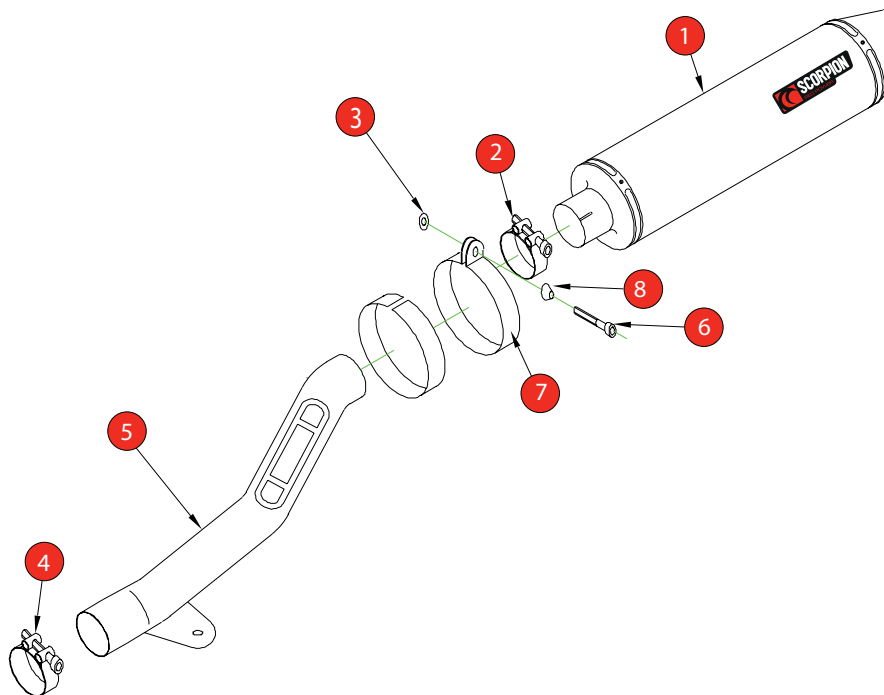

- |  |  |
|--|--|
| 1 450mm Silencer ESC 50                | 8 Aluminium Bolt Finisher (Z026.20068) |
| 2 51-55mm Band Clamp (Z016.10002)      | 9 Silencer Strap Rubber (Z029.10022)   |
| 3 M8 X 25mm Washer (Z017.10825)        | 10 Bump Stop Kit (Z017.10010)          |
| 4 55-59mm Band Clamp (Z016.10004)      |  |
| 5 Connecting Pipe CP264                |  |
| 6 M8 X 25mm Cap Head Bolt (Z017.10073) |  |
| 7 Oval Silencer Strap (Z028.10231)     |  |

E-MARK ROUND	N/A
E-MARK OVAL	BSAU 193a 1990/t3
ISSUE NO.	11
DATE	03/08/21
AUTHORISED	M.Ydlibi
CHECKED	

**NOTE:** ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.