


Box: PLOCK 1

BIKE	BMW F800 ST	PART NO.	EBM-60
YEAR	2007-13	FIT KITS	R - (Z039.10272) O - Z039.11272)
NOTES	Use standard fittings where not supplied <b>Remove standard gasket if fitted.</b>	DB-Killer	SCEXDBK12 - (Type B)

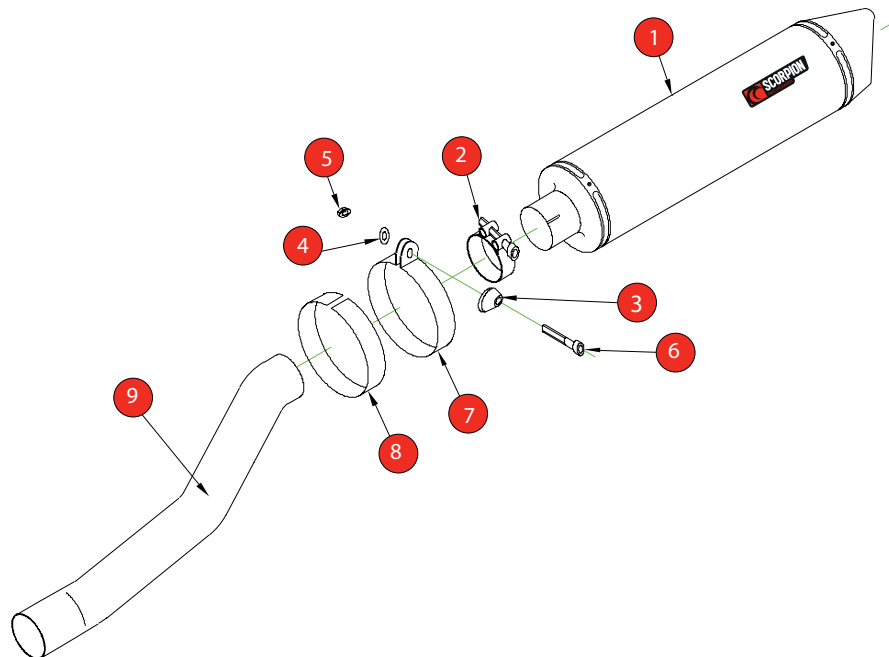

1 450mm Silencer ESC 57	8 Silencer Strap Rubber (Z029.10022)
2 55 - 59mm Band Clamp (Z016.10004)	9 Connecting Pipe CP445
3 Aluminium Bolt Finisher (Z026.20068)	
4 M8 x 25mm Washer (Z017.10825)	
5 M8 Nyloc Nut (Z017.10062)	
6 M8 x 35mm Cap Head Bolt (Z017.10075)	
7 Silencer Strap (R-Z028.10228) or (O-Z028.10230)	

E-MARK ROUND	BSAU 193a 1990/t3
E-MARK OVAL	BSAU 193a 1990/t3
ISSUE NO.	6
DATE	28/09/2018
AUTHORISED	J.Harkin
CHECKED	

**NOTE:** ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

- A) Remove original exhaust from bike, taking care to keep all original components in a safe place.
- B) Refit Scorpion exhaust as per line diagram above.
- C) When fitted take bike for a short ride to ensure all functions are correct.
- D) When bike & exhaust are cool enough check all nuts and bolts are still secure.